

Amulet Wiring Diagram

Inside back
of the Guitar


Preamp
Held in Place
with Velcro

Cable Clamp

1. Snap Pickup wires in first, then insert endpin cable.
2. Adjust wires through clamp so they don't bang on the guitar body.

EndPin

Nut
Washer

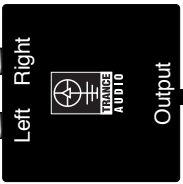

Tip: You can unscrew the plug out of the endpin and pull the wire through while tightening the nut with a nutdriver. Then screw the plug back in using the plug on the guitar cord as a handle.

Amulet Wiring Diagram

Inside back
of the Guitar


Preamp
Held in Place
with Velcro

Cable Clamp

1. Snap Pickup wires in first, then insert endpin cable.
2. Adjust wires through clamp so they don't bang on the guitar body.

EndPin

Nut
Washer

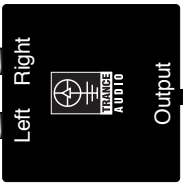

Tip: You can unscrew the plug out of the endpin and pull the wire through while tightening the nut with a nutdriver. Then screw the plug back in using the plug on the guitar cord as a handle.

Amulet Wiring Diagram (w/Sunrise)

Inside back
of the Guitar

Sunrise

Preamp
Held in Place
with Velcro

Cable Clamp

1. Snap Pickup wires in first, then insert endpin cable.
2. Adjust wires through clamp so they don't bang on the guitar body.

EndPin

Nut
Washer

Tip: You can unscrew the plug out of the endpin and pull the wire through while tightening the nut with a nutdriver. Then screw the plug back in using the plug on the guitar cord as a handle.

